

# RubbAire 1/6HP COMPRESSOR

#### Instructions & Maintenance

## **Operating Instructions**

Connect the equipment for your application to the outgoing 1/4" male fitting at the front of the cylinder head.

To keep the connecting fitting from leaking air you should always apply teflon tape to the thread of the fitting.

Connect the compressor to a protected power supply line with the same voltage as specified on the product label.

Adjust the outlet air pressure on the Filter/Regulator (see fig).

Compressor running is controlled automatically by a pressure switch, referring to the pressure in the outlet.

Do not use the compressor continuously for longer than 10 minutes.

Allow the compressor to cool down for 15 minutes after every 10 minutes working cycle.

Motor is equipped with a thermal protector with automatic reset.

# · CO

## **Compressor Maintenance**

Clean the compressor after every use.

After every use, drain the water collected in the Filter/Regulator bowl, pressing upwards the valve placed on the bottom side of the cup (outlet must be pressurized).

Once every three months, clean the filter of the Filter/Regulator by blowing with compressed air (see fig).



#### Installation

- 1. After taking the compressor out of its packaging, please check it carefully for any damages due to shipping.
- 2. Install the compressor on a flat surface in a suitable sized, dry room with good ventilation, where the temperature is not likely to rise above 94 degrees Farenheit (35 degrees Centigrade).
- 3. Be sure the electrical line rating is proper to the appliance (refer to the data label), and that the electrical line is protected and equipped of the ground line.
- 4. Dispose of the packing material in compliance with the regulations in the country or state where the compressor is installed.

### Safety

- 1. Do not use the compressor for any other purpose than the one it has been designed for.
- 2. Do not process other fluid than air.
- 3. Do not operate the compressor in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
- 4. Always make sure the unit is unplugged from the electrical line before performing any service, maintenance or cleaning.
- 5. Do not expose this unit to rain or moisture.
- 6. Do not allow children and other untrained people to use or play with the compressor.
- 7. To avoid the risk of burning, be aware that after extensive use of the compressor, some parts can become very hot. Allow the compressor to cool down before touching it.
- 8. Do not leave the compressor unattended while running.








#### SPARE PARTS LIST

Part No.	Description	Qty
01	Screw	9
02	Rear Cover	1
03	Fan	1
04	Screw	4
05	Condenser	1
06	Metal Shield	1
06-A	Screw	2
07	Power Switch	1
08	Wire Cover	1
09	Stationary Motor	1
10	Bearing	2
11	Rotary Motor	1
12	Front Body	1
13	Rubber Pad	4
14	Counterweight	1
15	Bearing	1
16	Retainer Ring	1
17	Link	1
18	Compression Ring	1

Part No.	Description	Qty.
19	Block	1
20	Valve Plate	1
21	Screw	1
22	Cylinder	1
23	O-Ring	1
24	Cylinder Block	1
25	Valve	1
26	O-Ring	1
27	<b>Pressure Switch</b>	1
27-A	O-Ring	1
28	Cylinder Head	1
29	Handle	1
30	Cap Screw	4
31	Front Gasket	1
32	Front Cover	1
33	Air Outlet	1
34	Rear Body	1
35	Wire Plug	1

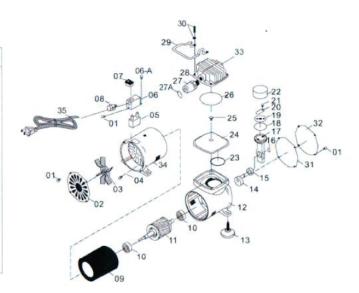

## **Limited Warranty**

The warranty is for the original purchaser. We will repair or replace, without charge, any part or compressor we find to be defective in factory material or workmanship within one year of purchase. Proof of Purchase is required. Warranty services are provided at our service facility located in Houston at the address shown below. You must pay all shipping and handling charges for your compressor. Any material that is shipped to SilentAire Technology without prior approval will not be accepted.

This warranty does not cover your compressor if the Serial Number or Model Number is removed or illegible. Or, if your compressor is (a) damaged in transport, by fire, corrosion, moisture or any occurences beyond our control, (b) subjected to negligence or misuse, or (c) operated or maintained contrary to our instructions. We will not be liable for damage to persons or property, commercialloss or incidental or consequential damage due to a defective compressor.

All implied warranties, including warranty of merchantability or fitness, are limited to the duration of this written warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore the above limitation may not apply to you.

If you wish to obtain warranty service or further information concerning this warranty, contact Chef Rubber at  $(830)\ 685-3156$ .

# **Related Chef Rubber Products:**



Airbrush Color Kit Primary Colors Item#: 301100



Color Jar 6 Pack In Case Grex Item#: 801211



Tritium TS5 Dbl Act .5m Pistol Trigger Side Feed Item#: 801124



Airbrush Grip Set For Tritium Airbrushes Item#: 801219



LVLP Top Gravity Fed Gun 1.4mm Nozzle 600mL Plastic Cup Item#: 801703



LVLP Cups
Metal or Plastic
For LVLP Top Gravity Fed Gun
Item#: LVLP-CUPS



10' Braided Nylon Air Hose 1/8" Female Connectors Item#: 801428



Airbrush Holder Holds up to 4 airbrushes Item#: 801225



Compressor 3 Line Manifold Quick Disconnect Ports Item#: 801452



Compressor 3 Line Manifold w/shut off valves Item#: 801450



Grex MAC Valve w/ Quick Connect Coupler For Grex Airbrush and Hose Item#: 801424



Grex Adapter Side Feed Fast Blast Cap Item#: 801416